


## SECTION 5

### EAST RAMP AND FLOAT POND OPERATIONS

#### 5.3 FLOAT POND TAXIING OPERATIONS *(rev. 4/2010)*

Pilots are required to contact ATCT on frequency 118.3 **prior** to taxiing on the Float Pond. Clearance must be obtained before entering or taxiing across the water lane and for high speed, or step-taxiing, outside the water lane. High speed taxiing is not permitted outside the water lane within the North Channel.

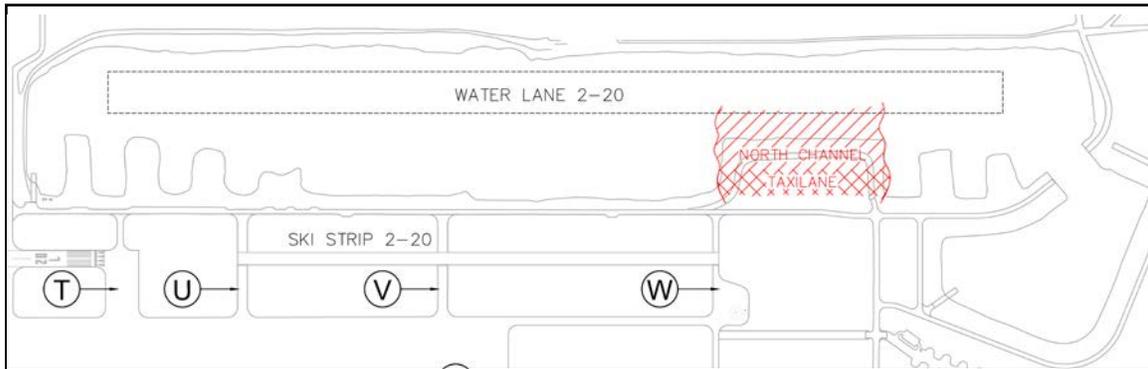

**Map 5-1 North Channel Restricted Area**